


S & K TV Systems

Cable Box/Remote Operation instructions

Standard Definition Box (TVS 4000)

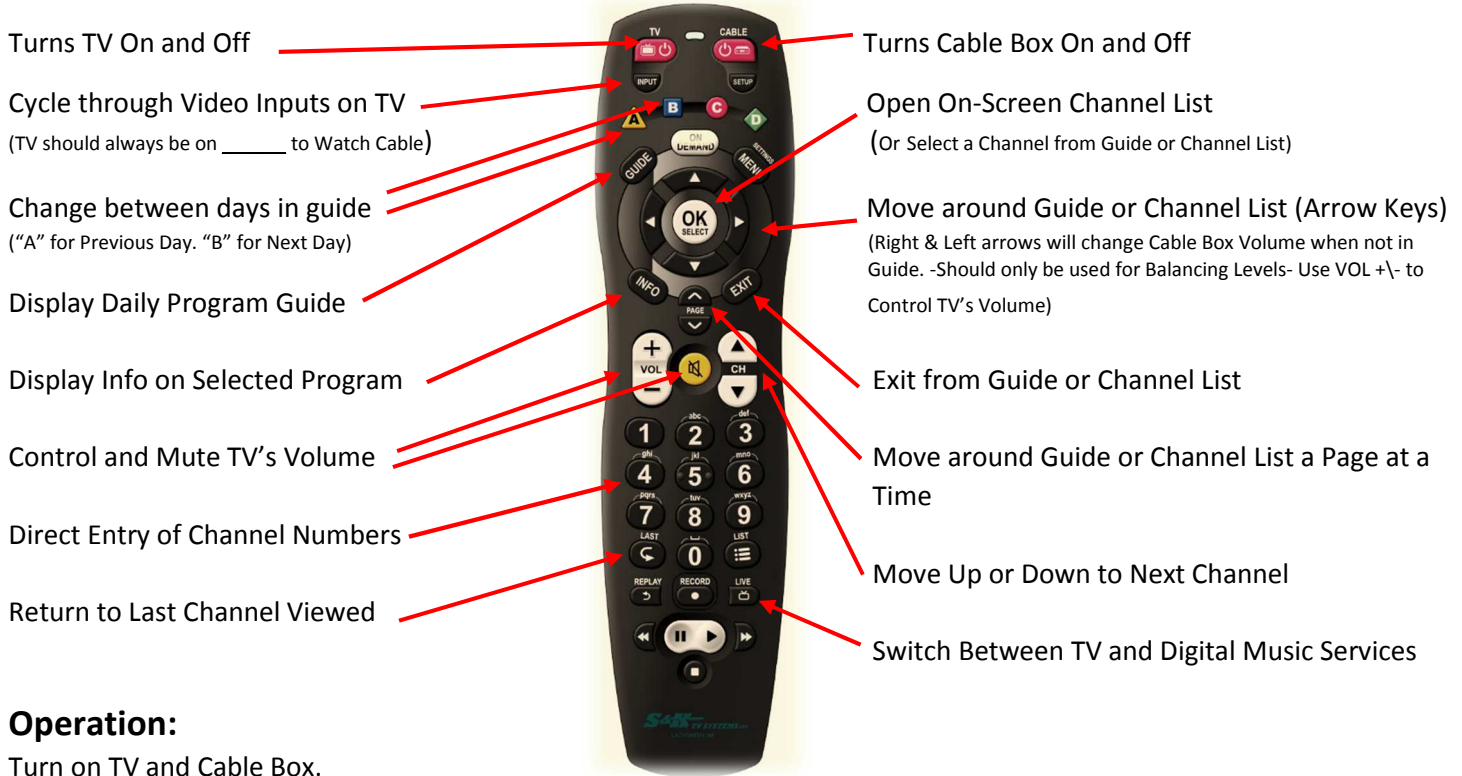

Operation:

Turn on TV and Cable Box.

Tune the channel number using the number pad or channel up/down buttons. Refer to printed listing on back of this card.

Optional: Press Guide or OK button to access Program Guide or Channel listing. Choose your channel by navigating through guide or channel listing. Hit select to tune channel. (You can hit exit at any time to stop navigation and tune the channel number using the number pad or channel up/down buttons.)

Trouble shooting:

TV is on but has no picture:

No lights on cable box – Make sure box is plugged into power outlet.

Turn box on using power switch on back left corner.

Flashing red light on cable box – Turn on cable box using "Cable" power button on remote.

Solid red light, and flashing green Light on box – Check to see if coax connector is connected tightly to Wall outlet and RF input on box.

Solid red and green lights on box – Verify TV is on the correct video input (_____) using input button On the remote to cycle through available inputs.

Check red, yellow, and white, connections from cable box to TV for tightness. Replace cables if necessary.

TV has a frozen picture (or you have verified the steps above and still have no picture):

Power cycle the cable box – Turn the cable box off using the power switch on back left corner of box.

Leave off for 30 seconds.

Turn the Cable box on using the power switch on back left corner of box.

Allow 1 minute to start up.

Allow 30 minutes for all guide data and program information to reload.

If you are still having problems contact us at 1-800-924-7880.

Broadcast Basic \$39.90			Expanded Basic \$76.95 - Includes Broadcast Basic & Digital Music				
Channel #	Channel Name	Channel #	Channel Name	Channel #	Channel Name		
SD	HD	SD	HD	SD	HD		
2	102	26	126	53	153		
3		27		54			
4	104	28		55			
5	105	29		56			
6		30		57			
7	107	31		58			
8		32	132	59			
9		34	134	60	160		
10	110	35	135	61	161		
11	111	36	136	62	162		
12		37		63	163		
13	113	38		64	164		
14		39		65			
15		40		66			
16		41	141	67			
17		42		68			
18		43		69			
19		44	144	70			
20		45		71			
21		46		72			
22		47		73			
23		48		74			
24		49	149	75			
25		50		76			
		51		77			
		52	152	78			

Digital Tier \$11.45 - Must Have Expanded Basic						
202		210		220		
203		211		221		
204		214		222		
205	305	216		223	323	
206		217		224		
208		218		225		
209		219		226		
				227		

Premiums Prices Vary- Call						
33		410		421		
400		411		422		
401		412		423		
402		413		424		
403		414		425		
404		415		426		
405		416		427		
406		417		428		
407		418		429		
408		419		430		
409		420		431		

Digital Music Included With Expanded Basic					
(Use "live" button on remote to switch between TV and music channels.)					
900	Beautiful Instrumentals	910	80s Hits	920	Holidays & Happenings
901	Jazz Vocals	911	70s Hits	921	Great Standards
902	Hottest Hits	912	Classic R & B	922	Golden Oldies
903	Modern Country	913	Traditional Country	923	Reggae
904	Alternative Rock	914	Soft Hits	924	Children's
905	Coffeehouse Rock	915	Retro Disco	925	Adult Contemporary
906	Dance	916	Acid Jazz	926	Lite Classical
907	Contemporary Christian	917	Big Band/Swing	927	Rock-n-Roll Oldies
908	Album Rock	918	Smooth Jazz	928	Classic Rock
909	Hard Rock	919	New Age	929	Urban Beat